straightpoint USER GUIDE

SW-MWLC100 Multiple Wireless Loadcell Controller Software

- 1 - int ok 🜩 (99:00 \$ 100%	10/03/2015 10.41:41 4000 5.3 0.54 0.55 0.54 14.7 10/03/2015 10.41:41 4000 5.3 0.54 1.6 2.23 14.17
239.24	48.44.91	10/03/2015 1.6 7.62 32.45 10/03/2015 10 Load test #4752
100 Channel Logger Remote View	0	10/03/2015
Example Project Status:		1009/2015 ** 1009/2015 1009/2011 **
Channel		10/03/2015
Radiolink 1	Value LQI Status	
Radiolink 2	85.097	
Radiolink 3	86.199	
Radiolink 4	88.072	
Radiolink 5	89.945	
Radiolink 6	91.818	
Radiolink 7	93.090	
Radiolink 8	93.303	
Radiolink 9	99 308	
Radiolink 10	100.000	
Radiolink 11	98.127	
Radiolink 12	96.255	
Radiolink 13	94.382	Loss Carl Tas Loss Carl Tas
Radiolink 14	92.509	
	90.636	
	88.764	2 Tan 2 Tan 2 Tan
		Land and the second sec
Status Key: O Error Coweatt	 Net Mode Warning Level Exceeded 	
		Lancon Fillian Cont The Inter Cont Theorem 2018
		straightpoint
	ή μ μ	

9



Straightpoint reserves the right to make changes to the contents herein without notice and shall not be responsible for any damages (including consequential) caused by reliance on the information provided, including but not limited to technical or editorial errors or omissions.

The only warranties for Straightpoint products and services are set forth in the warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty.

© Copyright 2016. The copyright of this User Guide is the property of Straightpoint Limited.

To make it easier in the event you need technical support customer service, please complete the following information:

Software Version:				
Media:	USB	memory stick	Download	
Date of Purchase:				

Trademarks

Windows® XP, Windows® Vista, Windows® 7, Windows® 8, Windows® 9 and Windows® 10 are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

Intel® Core™ i3 processor is a trademark of Intel Corporation or its subsidiaries in the United States and/or other countries.

Marks & Symbols

The following symbols may be used within this user guide.



Indicates a note or where attention is required



IMPORTANT Indicates an important step, instruction or information necessary for the proper functioning of the software or loadcell monitoring.



Indicates a potentially hazardous situation that if not followed or avoided may result in personal injury or damage to property.

Straightpoint (UK) Ltd

Unit 9, Dakota Park, Downley Road Havant, Hampshire, PO9 2NJ UK Tel: 02392 484491 Fax: 02392 472211 straightpoint.com · sales@straightpoint.com The Crosby Group

2801 Dawson Rd, Tulsa, OK 74110, USA Tel: 918 834-4611 thecrosbygroup.com sales@straightpoint.com



1.	Introduction	4
	Intended Use	4
	Additional Required Items & Documents	4
	Computer System Requirements	4
2.	System Overview	5
	General	5
	SW-MWLC100 Software	5
3.	Installation & Set Up	6
3.	Installation & Set Up Installation	6
3.	Installation & Set Up Installation Set Up	6 7
3.	Installation & Set Up Installation Set Up Transceiver Alignment	6 7 12
3.	Installation & Set Up Installation Set Up Transceiver Alignment Data Logging	6 7 12 13



1. Introduction

Intended Use

The Straightpoint Multiple Wireless Loadcell Controller Software (SW-MWLC100) is intended to be used by professionals in the heavy lifting and weighing industry for simultaneous wireless monitoring and data logging of Straightpoint wireless loadcell load measurements.

The software and required drivers is available as a download, or provided on a USB memory stick.

The software licence is free.

Additional Required Items & Documents

- Straightpoint SW-USBBSE Transceiver;
- Any Straightpoint wireless Loadcells (maximum 100);
- Loadcell User Guides (for relevant loadcells being used);
- Desktop computer/laptop/tablet/other Windows® device.

Computer System Requirements

- Intel[®] Core[™] i3 processor with minimum 2 GB RAM;
- Windows® XP, Windows® Vista, Windows® 7, Windows® 8, Windows® 9 or Windows® 10 (must have English language option selected);
- Spare USB port (not hub).



Caution

Ensure Straightpoint wireless loadcells are handled and used in accordance with the safety instructions within the appropriate Loadcell User Guide. This is supplied with the loadcell.

Other equipment used in conjunction with Straightpoint loadcells, such as jacks, hydraulic cylinders, chains, strops, lifting frames, and other material handling equipment, must be inspected, checked, handled and used in accordance the appropriate manufacturer/supplier information and/or with all pertinent regulatory requirements and Industry Standards/Codes of Practice.



2. System Overview

General

The Straightpoint Multiple Wireless Load Cell Controller (SW-MWLC) software package is a wireless loadcell control, display and data logging tool that provides simultaneous wireless communication between Straightpoint wireless load cells and Windows PCs/devices. A resizable window displays a table of up to 100 wireless load cell channels of live data. Channels can be setup with user defined mathematical functions that can be used to calculate a multitude of results.

For example, a display can show the value from a single load cell or the sum of multiple load cells. Visual display and audio alarms can indicate under and over range as well as loss in communications, low battery and error reports. SW-MWLC can log on demand, at pre-set intervals, on entering and leaving a pre-set overload and during an overload. Data is logged to a CSV file which can be opened for analysis by software programs such as Microsoft Excel. JSON format data is also available on demand via the built in web server.

For more complex applications graphical pages can be built showing the data in a variety of formats including digital display or bar graphs. Up to eight pages can be defined and the pages easily navigated between. A variety of image formats can be imported, including JPG, GIF, PDF and DXF.

Custom applications including branding and colour scheme are available.

SW-MWLC100 Software

Features;

- User friendly interface;
- Displays and logs data from up to 100 Straightpoint wireless load cells;
- Mapping/graphical capabilities;
- Webserver offers remote viewing on iPads/tablets/smart phones and also supplies JSON data on demand;
- Logging at timed intervals, manual or on overload/underload;
- Visual and audible alarms indicates overload, low battery and communications error;
- Zoom in to channel to see data trends and history;
- Export and log data in CSV format;





3. Installation & Set Up

Installation

- 1. Insert the USB key in to a spare USB port on your computer/laptop/tablet/device (do not use a hub) and follow the on-screen instructions to install the software.
- 2. Remove the USB Key.
- 3. Insert the SW-USBBS Transceiver into the USB port, and let the drivers install.





Important

To ensure optimum reception of the signal transmitted from the loadcell(s), see the end of this section 3 for mounting and alignment guidance.

4. Run the software from the desktop or start menu icon and you will be presented with the screen below.





Set Up

The following steps are an example of how to configure the software.



Important

Substitute the data tags that correspond to your own loadcells.

The data tag is pre-set during manufacture and is set up as the last four digits of the serial number engraved on each Straightpoint loadcell. It is also detailed on the calibration and the supplied Calibration Certificate.

The example configuration uses four 50t wireless load cells that are to be display the load from each cell plus the total load.

Their serial numbers are;

Which means their corresponding data tags are:

<3567> <9745> <5424> <6876>



EXECEPTION: If the last 4 digits of the serial number starts with '0', replace that '0' with 'F'. That is, if the serial number is 10876 for example, then use datatag as 'F876'

To configure a new project; From the main screen menu bar:

1. Click on Edit - Configure Project.

File	Edit	Sleep & Wake	Logging	Alarm	View H	lelp
Cha		Configure Project	t Ctrl	+C		
		Edit Map				
		Preferences				



This will reveal the following screen.

	tle									
USB - E	xample P	roject								Keep Awake
COM Port Baudra	ate	Radio Char	nnel Base	Station A	Address I	Displays	Log Type			Log Interval (ms)
1 * 11520	0 -	1 -	1	•		5 •	Auto (At int	erval)	•	1000
Display Descript	tion	Expression	Format	Tare	Timeout	Default	Underload	Warning	Overload	Function
1 Radiolir	nk O	<3567>	00.000	0	3	0	0.1	49.00	51.00	None
2 Channe	12	<9745>	00.000	0	3	0	-99999999	99999999	99999999	None
3 Channe	el 3	<5424>	00.000	0	3	0	-99999999	99999999	99999999	None
4 Channe	el 4	<6876>	00.000	0	3	0	-99999999	9999999	9999999	None
Expression										
Expression <3567>										
Expression <3567> Title								Timeout	(s)	Default Value
Expression <3567> Fitle Radiolink One								Timeout 3	(s)	Default Value 0
Expression <3567> Title Radiolink One Format/Resolution	Tare Va	ilue	Underloa	d	Warning	c	Dverload	Timeout 3 Functi	(s) on	Default Value 0
Expression <3567> Title Radiolink One Format/Resolution 00.000	Tare Va 0	ılue	Underloa 0.1	d	Warning 49.00	C	Overload 51.00	Timeout 3 Functi	(s) on	Default Value 0
Expression <3567> Fitle Radiolink One Format/Resolution 00.000 Notes	Tare Va 0	alue	Underloa 0.1	d	Warning 49.00	C S	Overload 51.00	Timeout 3 Functi	(s) on	Default Value 0

2. Set the Displays button to '5'.

Displays

5	_
5	· · · ·

3. Enter the description and the data tags for each loadcell using the 'Description' and 'Expression' fields for the displays 1 to 4 respectively. Ensure that the triangular brackets are typed in to enclose the four numerical digits of the data tag.

A number of mathematical functions are available to carry out calculations and display the results.

For example, to calculate the total load across the five loadcells:

- Add a new description 'Total Load' for display 5
- In the 'Expression' field, enter the mathematical function <3567>+<9745>+<5424>+<6876> as below:

Expression
<3567>+<9745>+<5424>+<6876>
Title
Total Load:
Format/Resolution Tare Value Un

Display number 5 will now show the sum of the loads measured by each of the four loadcells.

For other available mathematical functions, click on the 'Help' button on the menu bar on the main screen.

Other parameters can also be set up on the Configure screen:



USB	▼ E	le ample l	Project		_							📄 Кеер	Awake	
COM Port	Baudra	te	Radio Cha	nnel E	Base	Station	Address	Displays	Log Type			Log Inte	rval (ms)
1 ~	115200	1. 7	1 .	.][1	•		5 🔹	Auto (At int	erval)	•	1000		
Display	Descript	ion	Expression	Form	nat	Tare	Timeout	Default	Underload	Warning	Overload	Funct	ion	
1	Radiolin	k 0	<3567>	00.00	0	0	3	0	0.1	49.00	51.00	None		
2	Channe	2	<9745>	00.00	00	0	3	0	-99999999	99999999	99999999	None		
3	Channe	3	<5424>	00.00	0	0	3	0	-99999999	99999999	9999999	None		
4	Channe	4	<6876>	00.00	00	0	3	0	-99999999	99999999	9999999	None		
-	TotalLo	30;	<330/>+	00.00	~	0	2	0	-22222222	3333333	3333333	reone		
Expression <3567>	ŕ		2											
Expression <3567> Title	1		2							Timeout	(5)	Default	tValue	
Expression <3567> Title Radiolink C	Dine		2							Timeout 3	(s)	Default 0	t Value	
Expression <3567> Title Radiolink C Format/Res	Dine:	Tare V	2 alue	Unde	rloa	d	Warning	c	Verload	Timeout 3 Functi	(s) on	Default 0	t Value	
Expression <3567> Title Radiolink C Format/Res 00.000)ne olution	Tare V 0	2 alue	Unde 0.1	rloa	d	Warning 49.00	C S	Overload	Timeout 3 Functi None	(s) on	Default 0	t Value	
Expression <3567> Title Radiolink C Format/Res 00.000 Notes	One solution	Tare V 0	2 alue	Unde 0.1	rloa	d	Warning 49.00	6	Overload 51.00	Timeout 3 Functi None	(s) on	Default 0	t Value	

- 1 Project Title
- 2 Loadcell title/description
- 3 Format/Resolution of loadcell. This is displayed on each loadcell, e.g. MAX: 50t x 0.01t. For this example, set 00.01.
- 4 Tare value if known, a tare can be entered for the weights of such things as shackles or slings.
- 5 Underload alarm value.
- 6 Warning alarm level.
- 7 Overload alarm value.



4. When all of the set up parameters have been entered, click on the 'OK' button in the bottom right hand of the screen.

This will reveal the screen shown below:



No values will be seen in the displays as the loadcells are in 'sleep mode' and need to be woken up.

5. To wake the loadcells, click on the Sleep & Wake button on the menu bar.

File Edit	Sleep & Wake	Logging	Alarm View I
Radiolir	Wake	Ctrl+W	
	Sleep		



This will reveal the screen shown below:



The loadcells are now awake with the displays 1 to 4 showing the loads on each loadcell, and the total load as previously set up, showing on display 5.



Transceiver Alignment

To achieve optimum reception of transmitted microwave signals from the loadcell(s), consideration should be given to the operating environment and alignment of the USBBE receiving module.

The following guidelines and tips will ensure best possible reception and range.

To achieve the best possible signal reception, the USBBE should be mounted with the long side of the module vertical, and the top face pointing towards the loadcell(s). (Fig.1 and Fig. 2)

Try to ensure there is line-of-sight between the loadcell(s) and the USBBE receiver with no obstructions in the path, as these will reduce the range and may possibly degrade performance of radio link due to reflected indirect signals reaching the USBBE receiver. Obstructions can, in the worst case, result in complete loss of the radio link. (Fig. 3)

Wherever practicable, try to avoid having structures or objects in the immediate vicinity of the transmitter and receiver antenna fields as these may distort the field patterns and adversely affect the range and quality of the radio link. Ideally, objects and structures should be at least one metre away from the antennae.



Fig. 1 Vertical mounting of USBBE for optimum signal reception.



Fig. 2 Antenna receiving field



Fig. 3

Establishing an obstacle free line-of-sight path between the USBBE receiver and the loadcell transmitter will provide best quality radio link and greatest range.



4. Data Logging

Data from the multiple loadcells can be logged and imported into an Excel into spreadsheet. To do this:

1. Click on 'Logging' on the main screen menu bar and select 'Start Logging' from the drop-down menu.

🐏 Example Project - Straigh	tpoint Multichannel Lo	gger	
File Edit Sleep & Wake	Logging Alarm Vie	ew Help	
Radiolink One:	Start Logging	Ctrl+L	
	Log Now	Ctrl+N	
	Stop Logging	Ctrl+T	
	View Last Log	Ctrl+V	

This will cause a pop-up screen to appear as shown below.





2. Enter file name and destination where the data is to be filed. The system will automatically start logging and saving data to the chosen destination.



3. To stop logging, re-select 'Logging' from the main menu bar and select 'Stop Loggng' from the drop-down menu. The spread sheet will then automatically open.

a casa .	Vendama B J T	- 8 -	X X ==	- + - 	19 Waap Tani 19 Margar & Career -	General US - No	- 14.05	Candidianas Pr	whet Crit	Biven Derete	Format 2 Au	ter See &	Phe a	
Provide re	1000 101 100 m	Read .	-	1000	and the second second	1		FROMANDALY AL	1989 - 30461 -	-	· 20	THE THE C	lated -	
1.71													_	_
-		14												
C Log Date	1.049												-	75 10
4	A	6	C	D.	E	. F. 1	6	14	1	1	ĸ	1	M	
1 Dat	e	Tame	Elapsed mS	Load Cell 1	Load Cel 2 Lo	od Cell 3 L	ood Cell 4	Total Load						
2	17/07/2012	10:59:59	1000	32.39	41.28	29.87	34,79	138.33						
3	17/07/2012	11:00:00	2000	32.39	41.26	29.87	34.79	138.31						
-4	17/07/2012	11:00:01	3000	33.05	41.28	29.87	34.79	141.55						
5	17/07/2012	11:00:02	4000	34.33	41.97	29.86	34.79	146.27						
6	17/07/2012	11:00:03	5000	35.17	43.16	29.86	35,60	150.94						
7	17/07/2012	11:00:04	6000	35.72	43.93	30.48	36.74	153.20						
8	17/07/2012	11:00:05	7000	36.08	44,44	31.04	37,47	153.14						
9	17/07/2012	11:00:06	6000	36.26	44.70	31.33	38.55	156.78						
10	17/07/2012	11:00:07	9000	36.42	44.95	32.20	39,89	158.93						
11	17/07/2012	11:00:08	10000	36.94	45.12	32.96	40.77	160.59						
12	17/07/2012	11:00:09	11000	37.39	46.23	33.45	41.35	165.05						
13	17/07/2012	11:00:10	12000	37.68	47.51	33.78	41.72	165.01						
14	17/07/2012	11:00:11	13000	37.88	48.33	33.99	41.97	164.98						
15	17/07/2012	11:00:12	14000	38.00	46.68	34.13	42.13	164.91						
16	17/07/2012	11:00:13	15000	38.08	48.35	34.22	42.24	161.48						
17	17/07/2012	11:00:14	16000	36.91	42.20	34.28	42.31	156.92						
18	17/07/2012	11 00:15	17000	35.77	47.27	33.35	42.36	152.94						
19	17/07/2012	11:00:16	18000	35.03	46.98	32.34	41.29	148.58						
20	17/07/2012	11:00:17	19006	34.54	46.79	31.67	40.22	148.61						
21	17/07/2012	11:00:18	20006	34.28	46.79	31.32	39.67	149.49					1.	
22	17/07/2012	11:00:19	21006	34.06	47.99	31.00	39.15	153.26				1.1	3	
23	17/07/2012	11:00:20	22006	34.51	49.03	30.79	38.82	155.41						
24	17/07/2012	11:00:21	23006	34.97	49.70	29,88	38,60	150.62						
25	17/07/2012	11:00:22	24006	35.28	50,15	28.40	36.90	143.84						
26	17/07/2012	11:00:23	25006	35.48	49.51	27.42	34,97	139.58						
27														
28														
29														
30														_
31														
1.1.2.2	Loo Deta							0.00						inter C

From here data can be analysed and manipulated to produce graphs and other graphical representations for reports etc.



5. Advanced Features

The SW-MWLC100 software is a powerful package that offers many other advanced features not covered in this simple guide. Features include:

- Html report designer
- Webserver for remote access with other devises such as a smart phone
- Mapping this allows you to lay out custom screens, display and graphics

Full instructions for using these features may be found via the software help menus, accessible from the main screen menu bar.

